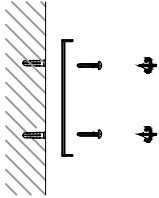
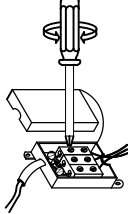
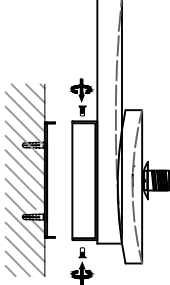
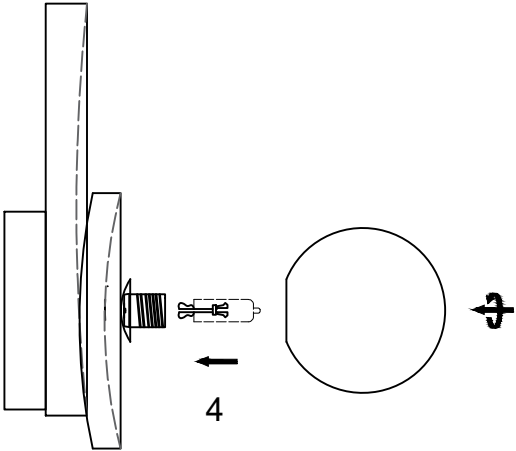


URBANROAD

ASSEMBLY INSTRUCTIONS

 <p>1</p>	 <p>2</p>	 <p>3</p>	
<p>REF/SKU : URL_AS_AL Lampholder: 1*G9 3W</p>		<h3>Installation program</h3> <ol style="list-style-type: none"> 1. Fix the wall mounting dash on wall by suitable screws. 2. Connect the wires in the junction box to the external power cords. 3. Push the lampbody on wall and match the dash position, then lock it tightly with screws. 4. Take the G9 bulb from the box and install to the holder, then prepare the glass shade to thread it on holder part tightly. 	
 <p>4</p> <p>5</p>		<h3>ATTENTIONS</h3> <p>ⓘ WARNINGS</p> <ol style="list-style-type: none"> 1. Do not disassembly this products 2. Do not strike or shake strongly 3. Do not wipe with ethyl alcohol, gasoline or paint thinners etc. <p>Assembling Attentions:</p> <ol style="list-style-type: none"> 1. Components should be on desk, without any defect or out of shape. 2. The bearing of mounting plate should be enough for the lamp, expansion screw is needed for big chandeliers. 3. Once wight of chandelier is over 3kg, it should be fix with Embedded chain hoist to make sure not pressure to wire 4. Incandescent light bulb can not be installed to combustible hook directly, can not cling to fabric shade, power can not higher than maximum marked on lamp. 	