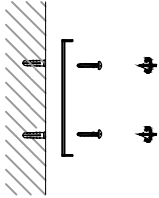
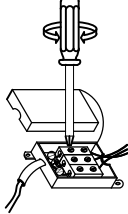

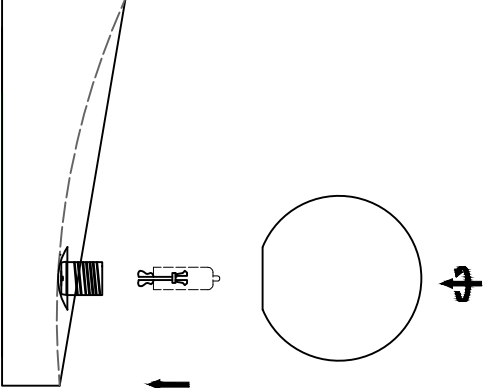


# URBANROAD

## ASSEMBLY INSTRUCTIONS

 <p>1</p>	 <p>2</p>	 <p>3</p>	
<p>REF/SKU : URL_SS_WH Lampholder: 1*G9 3W</p>		<h3>Installation program</h3> <ol style="list-style-type: none"> <li>1. Fix the wall mounting dash on wall by suitable screws.</li> <li>2. Connect the wires in the junction box to the external power cords.</li> <li>3. Push the lampbody on wall and match the dash position, then lock it tightly with screws.</li> <li>4. Take the G9 bulb from the box and install to the holder, then prepare the glass shade to thread it on holder part tightly.</li> </ol>	
 <p>4</p>		<h3>ATTENTIONS</h3> <p><b>⚠ WARNINGS</b></p> <ol style="list-style-type: none"> <li>1. Do not disassemble this product.</li> <li>2. Do not strike or shake strongly.</li> <li>3. Do not wipe with ethyl alcohol, gasoline or paint thinners etc.</li> </ol> <p>Assembling Attentions:</p> <ol style="list-style-type: none"> <li>1. Components should be on desk, without any defect or out of shape.</li> <li>2. The bearing of mounting plate should be enough for the lamp, expansion screw is needed for big chandeliers.</li> <li>3. Once weight of chandelier is over 3kg, it should be fixed with Embedded chain hoist to make sure not pressure to wire.</li> <li>4. Incandescent light bulb can not be installed to combustible hook directly, can not cling to fabric shade, power can not higher than maximum marked on lamp.</li> </ol> <p>5</p>	