



Wire Installation Guide

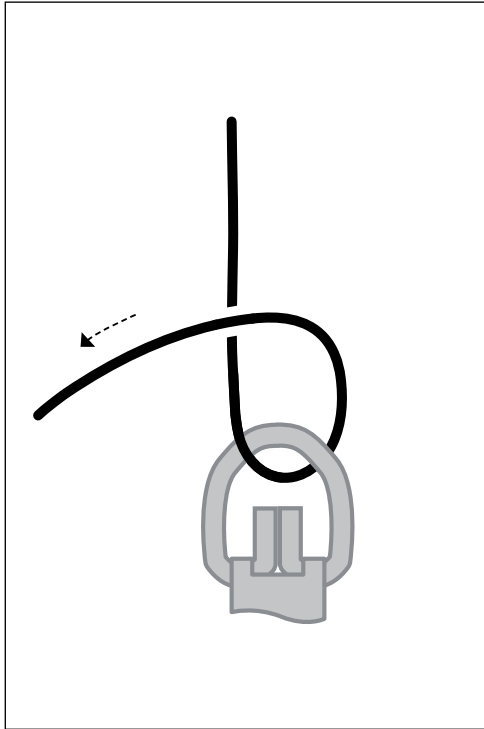


STEP 1:

Cut a piece of wire that is about 10-15cm wider than your frame. Loop about 5cm of one end through the D Ring.

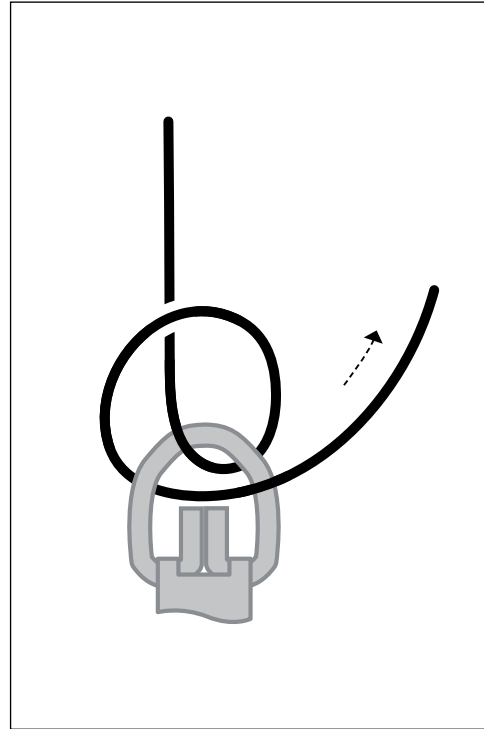


STEP 2:

Bring the wire back across the already looped wire, and down through the D Ring. Pull the wire up through the loop, finishing the knot.

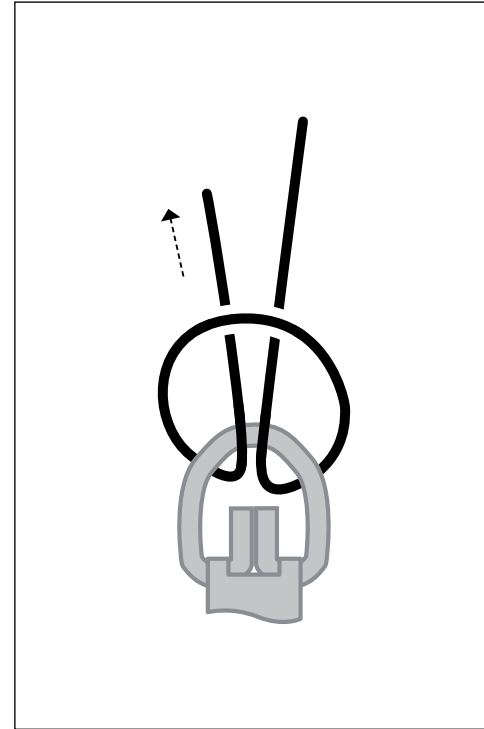

STEP 3:

Adjust the wire and loop to ensure it sits in the right position before pulling it taut to secure. Trim the wire, leaving about 5cm of excess.

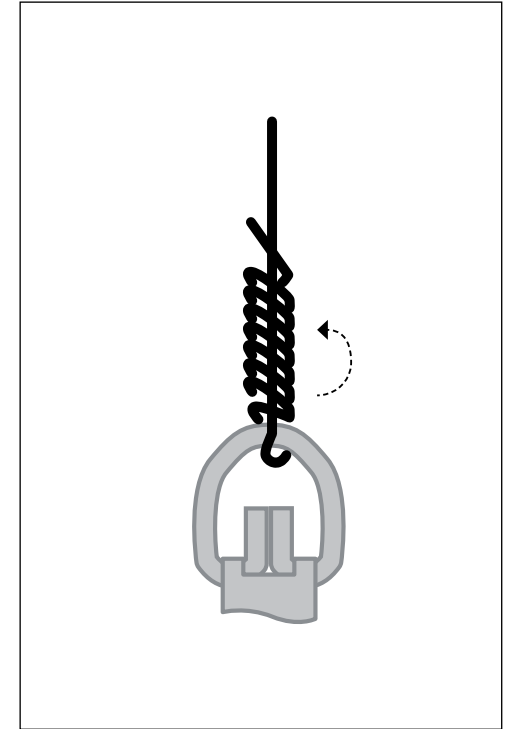

STEP 4:

Twist short end around the longer length of wire. Flatten the end with the pliers to ensure that no sharp end is exposed. Repeat on both sides and you're ready to go!

